



dg_udp10giprx_fpgasetup_xilinx_en.doc

FPGA Setup for UDP10GRx-IP demo

1	Environment Setup.....	1
2	FPGA board setup.....	4
3	Revision History	9

FPGA Setup for UDP10GRx-IP demo

Rev1.1 4-Jul-23

This document describes how to setup FPGA board and prepare the test environment for running 4-session demo or 16-session demo by UDP10GRx-IP. The demo is designed for transferring data from 10G Ethernet card that is installed on TestPC to the FPGA development board by running “trans_udp_multi” (test application) on TestPC. The application sends UDP packet to the FPGA development board via 1-16 sessions. The hardware including UDP10GRx-IP receives UDP data with or without data verification. The user interface for controlling the hardware via Serial console, run on TestPC. More details of the demo are described as follows.

1 Environment Setup

Please prepare following test environment.

- 1) FPGA development board: ZCU102 or KCU116 board
- 2) PC with 10 Gigabit Ethernet support or 10 Gigabit Ethernet card
- 3) 10 Gb Ethernet cable:
 - 10 Gb SFP+ Passive Direct Attach Cable (DAC) which has 1-m or less length
 - 10 Gb SFP+ Active Optical Cable (AOC)
 - 2x10 Gb SFP+ transceivers (10G BASE-R) with optical cable (LC to LC, Multimode)
- 4) Two micro USB cables for FPGA programming and Serial console monitoring, connecting between FPGA board and PC
- 5) “trans_udp_multi.exe” which is test application provided by Design Gateway, prepared on PC
- 6) Serial console software such as TeraTerm installed on PC. The setting on the console is Baudrate=115,200, Data=8-bit, Non-parity, and Stop=1.
- 7) Vivado tool for programming FPGA, installed on PC

Note: Example of test environment is shown as follows.

[1] 10G Network Adapter: Intel X520-DA2

<http://www.intel.com/content/www/us/en/network-adapters/converged-network-adapters/ethernet-x520-server-adapters-brief.html>

[2] 10-Gigabit SFP+ AOC (AOC-S1S1-001)

<https://www.10gtek.com/10gsfp+aoc>

[3] PC: Motherboard ASUS Z170-K, 32 GB RAM, 64-bit Windows10 OS

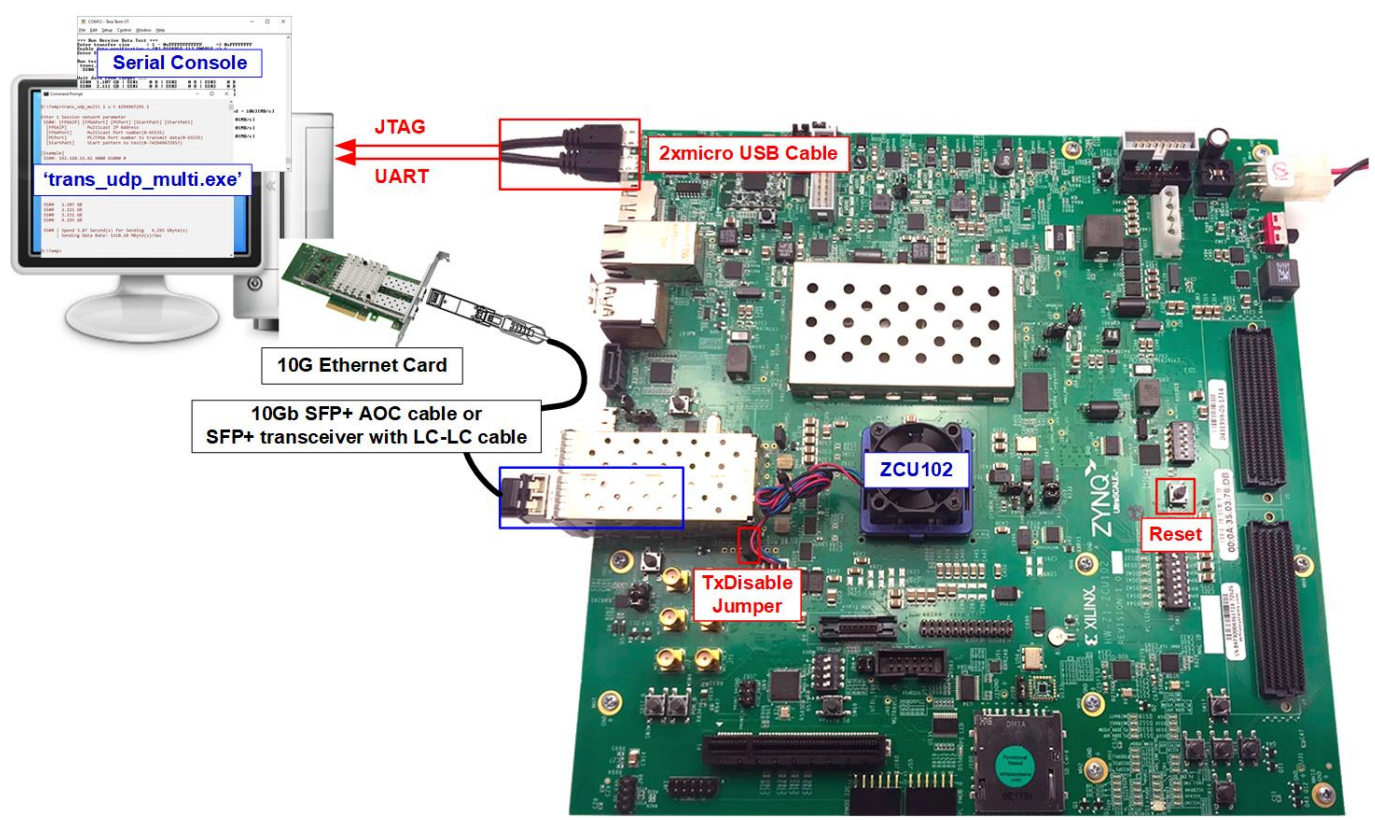


Figure 1-1 UDP10GRx-IP demo on ZCU102

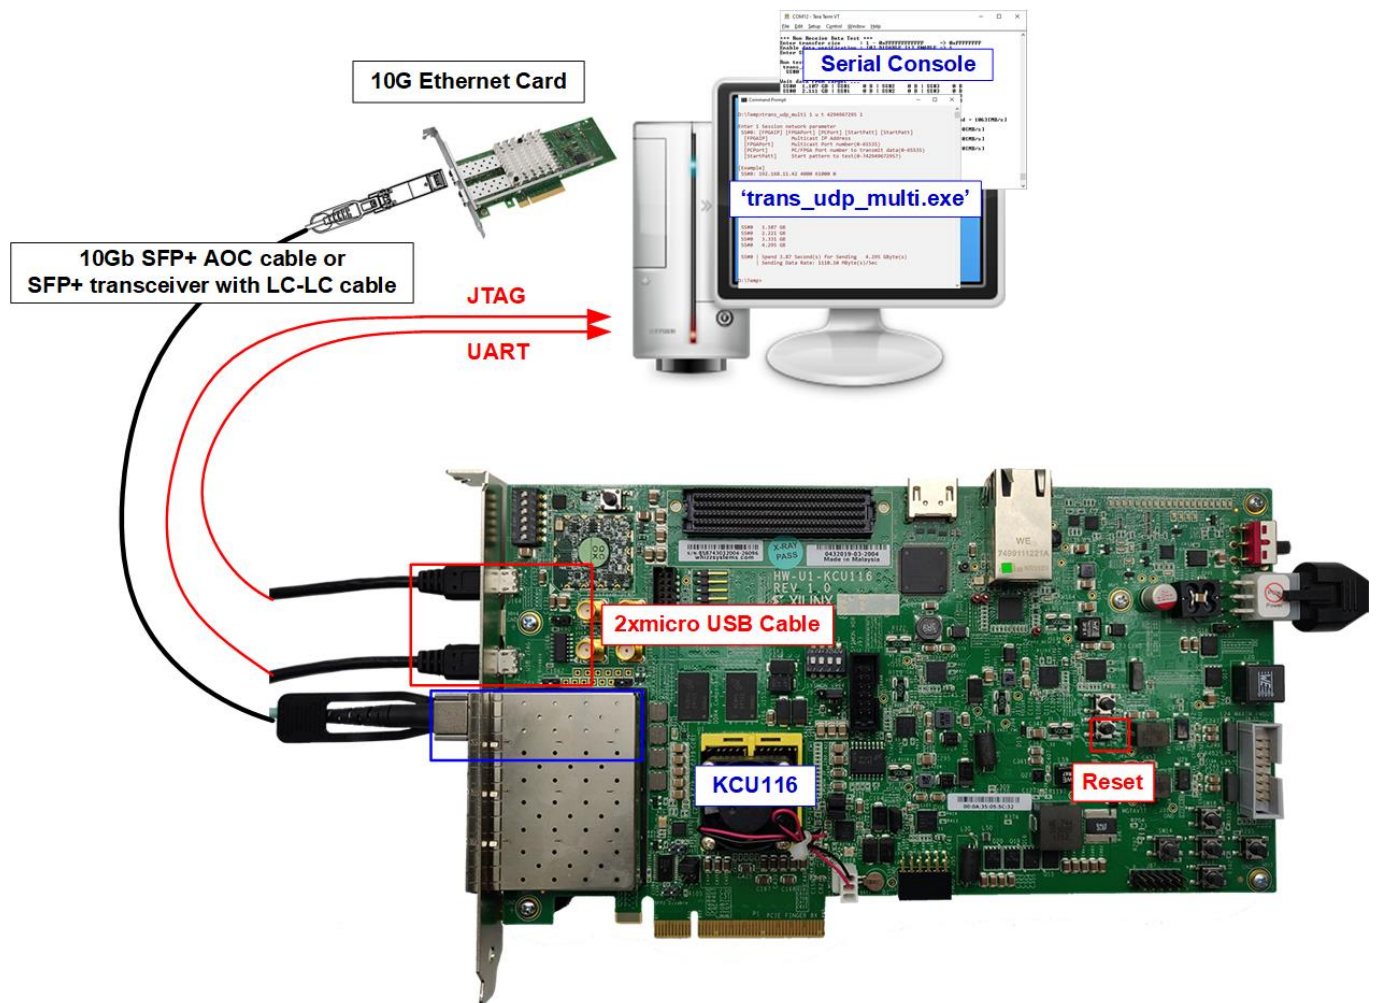


Figure 1-2 UDP10GRx-IP demo on KCU116

2 FPGA board setup

- 1) For ZCU102, check DIPSW and jumper setting on FPGA board as shown in Figure 2-1.
 - Insert jumper to J16 to enable Tx SFP+
 - Set SW6=all ONs to use USB-JTAG.

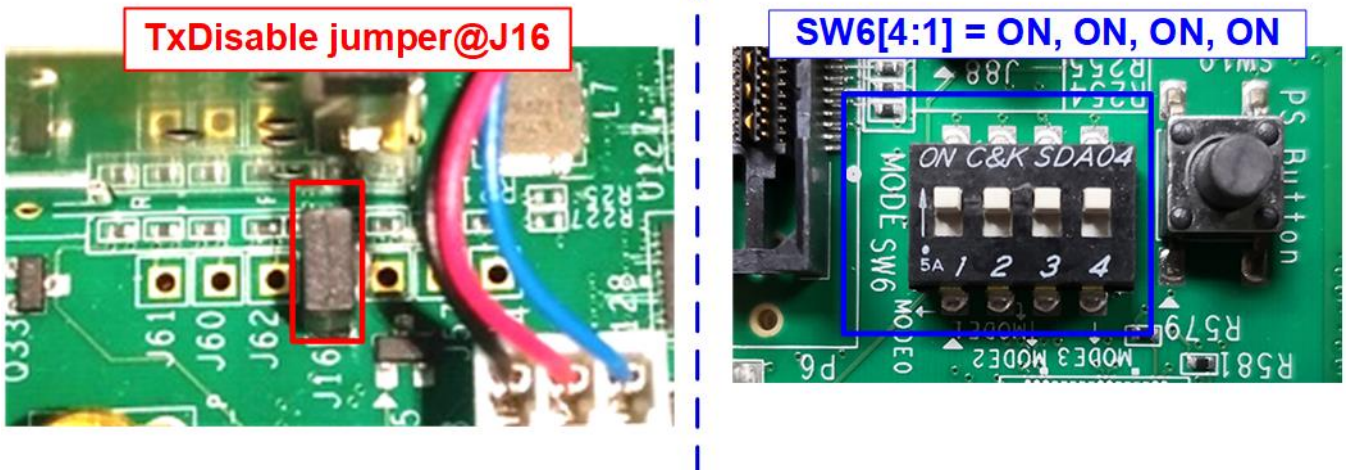


Figure 2-1 ZCU102 board setting

- 2) Connect two micro USB cables between FPGA board and PC for JTAG programming and USB UART.
- 3) Connect power supply to FPGA development board.
- 4) Connect 10 Gb Ethernet cable (10 Gb SFP+ DAC (Length<1m), AOC or SFP+ transceiver with LC-LC cable) between FPGA board and PC, as shown in Figure 2-2.
 - a) On ZCU102 board, use the top-right SFP+ channel.
 - b) On KCU116 board, use the left SFP+ channel.

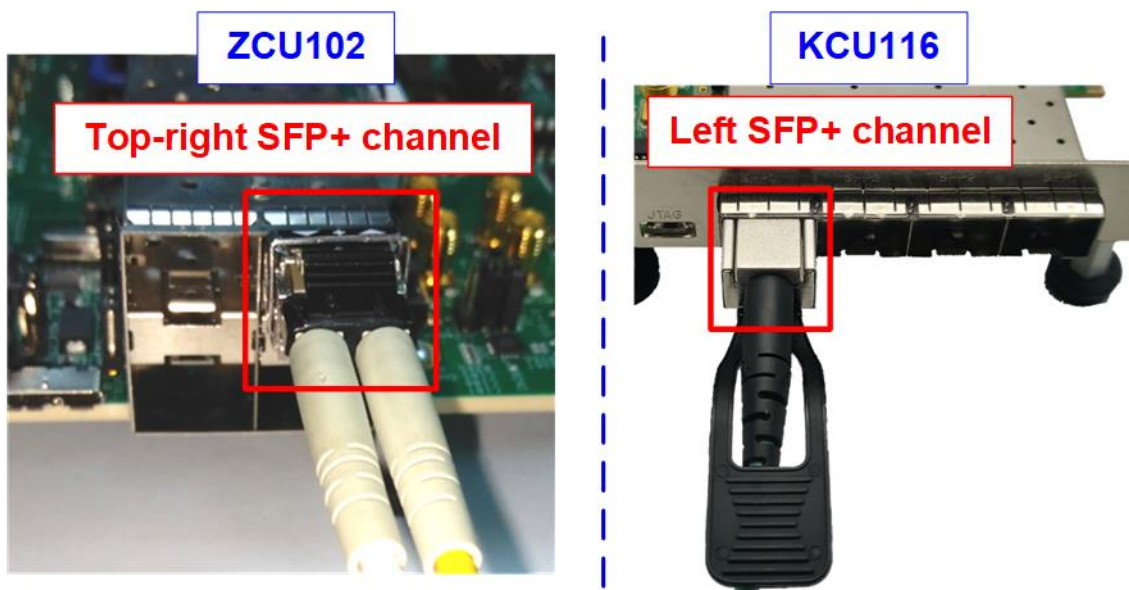


Figure 2-2 Connect SFP+ cable on ZCU102 or KCU116 board

- 5) Power on FPGA board.
- 6) Open Serial console. When connecting FPGA board to PC, many COM ports from FPGA connection are detected and displayed on Device Manager.
 - a) On ZCU102 board, select COM port number of Interface0 to be Serial console.
 - b) On KCU116 board, select Standard COM port to be Serial console.

On Serial console, use following setting: Baud rate=115,200, Data=8-bit, Non-Parity, and Stop = 1.

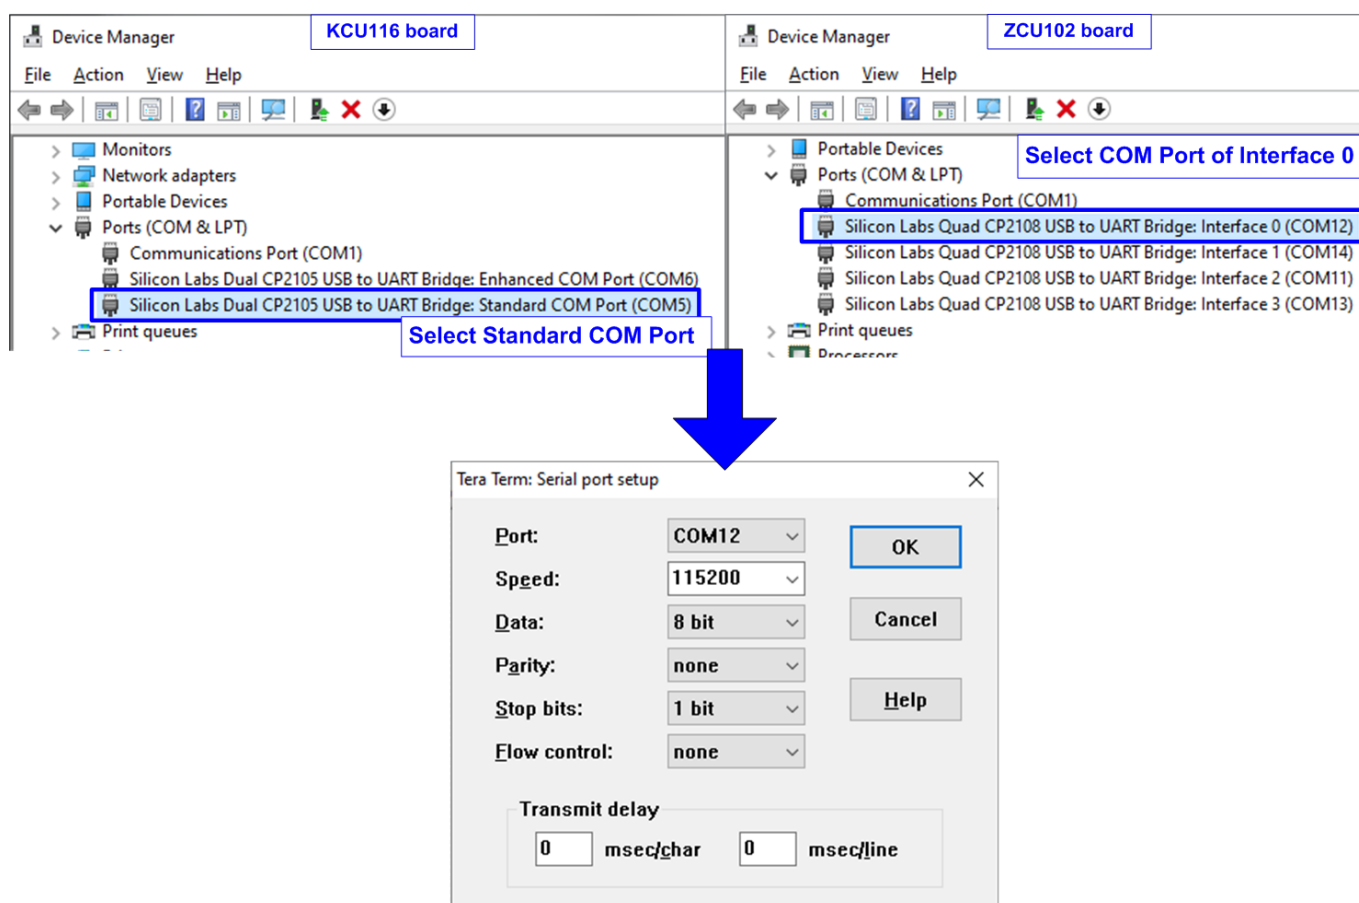


Figure 2-3 COM port number for Serial console

7) Download configuration file and firmware to FPGA board.

a) On KCU116 board, use Hardware Manager on Vivado tools, as shown in Figure 2-4.

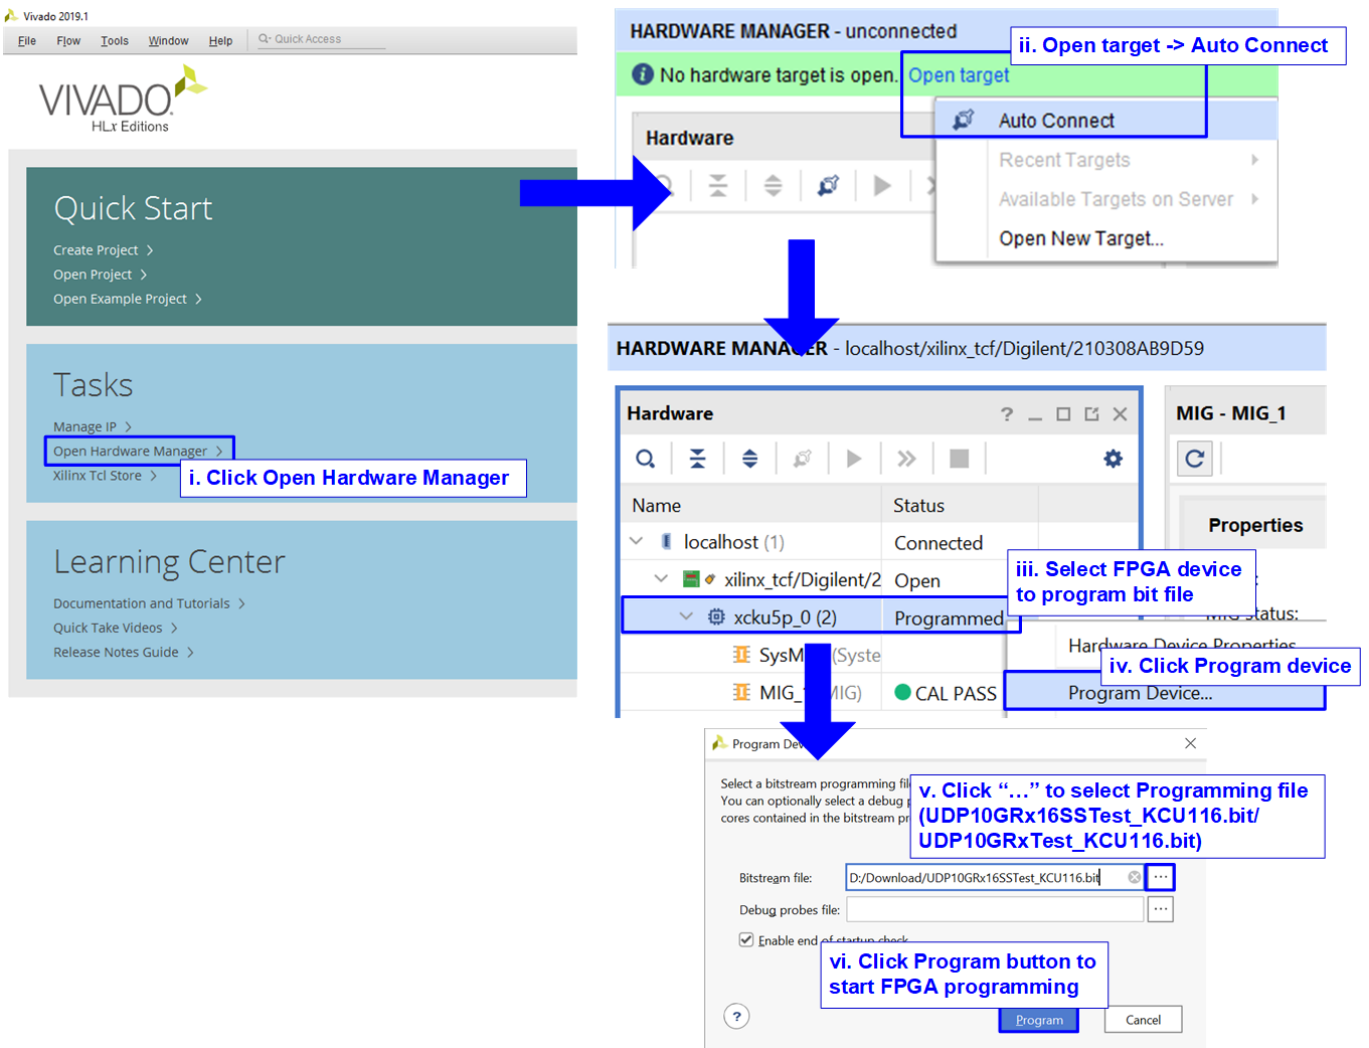


Figure 2-4 Program FPGA by Vivado

- b) On ZCU102 board, open Vivado TCL shell and change current directory to download folder which includes demo configuration file and command script file for download. After that, run “udp10grxtest_zcu102.bat/udp10grx16sstest_zcu102.bat” to configure FPGA and download firmware, as shown in Figure 2-5.

```

C:\ Select Vivado 2019.1 Tcl Shell - C:\Xilinx\Vivado\2019.1\bin...
***** Vivado v2019.1 (64-bit)
**** SW Build 2552052 on Fri May 24 14:49:42 MDT 2019
**** IP Build 2548770 on Fri May 24 18:01:18 MDT 2019
** Copyright 1986-2019 Xilinx, Inc. All Rights Reserved.

Vivado% cd D:/download
Vivado% udp10grx16sstest_zcu102.bat
  
```

Figure 2-5 Example command script for downloading ZCU102 by Vivado tool

- 8) After finishing downloading configuration file, default common parameter is displayed on the console.

```

+++ UDP10GRxIP 16 Session Demo [IPVer = 2.01] +++
> Test with LL10GEMACIP Ver 2.3

+++ Set Common UDP10GRxIP parameter +++
IP Mode = UNICAST
FPGA MAC address = 0x000102030405
FPGA IP = 192.168.7.42
Press 'x' to skip common IP parameter setting:
  
```

Figure 2-6 Display default common parameter

- 9) User enters 'x' to use default common parameters and then enters 'x' to use default session parameters which enable only session#0 by Unicast mode, as shown in Figure 2-7. Otherwise, user enters other keys (not 'x') to change common or session parameters. More details to change parameters are described in demo instruction document. After finishing system initialization, main menu is displayed on the Serial console.

Note: Transfer performance in the demo depends on Test PC resource in Test platform.

```

+++ UDP10GRxIP 16 Session Demo [IPVer = 2.0] +++
> Test with LL10GEMACIP Ver 2.3

+++ Set Common UDP10GRxIP parameter +++
IP Mode           = UNICAST
FPGA MAC address  = 0x000102030405
FPGA IP          = 192.168.7.42
Press 'x' to skip common IP parameter setting: x

+++ Set Session UDP10GRxIP parameter +++

```

Session	SSEnable	Target IP	Target Port Number	FPGA Port Number
0	ENABLE	192.168.7.25	61000	4000

```

Press 'x' to skip SS# 0 IP parameter setting: x


```

Session	SSEnable	Target IP	Target Port Number	FPGA Port Number
1	DISABLE	192.168.7.25	61001	4001

```

Press 'x' to skip SS# 1 IP parameter setting: x

+++ Current IP Parameter +++
IP Mode           = UNICAST
FPGA MAC address  = 0x000102030405
FPGA IP          = 192.168.7.42

```

Session	SSEnable	Target IP	Target Port Number	FPGA Port Number
0	ENABLE	192.168.7.25	61000	4000
1	DISABLE	-	-	-
2	DISABLE	-	-	-
3	DISABLE	-	-	-
4	DISABLE	-	-	-
5	DISABLE	-	-	-
6	DISABLE	-	-	-
7	DISABLE	-	-	-
8	DISABLE	-	-	-
9	DISABLE	-	-	-
10	DISABLE	-	-	-
11	DISABLE	-	-	-
12	DISABLE	-	-	-
13	DISABLE	-	-	-
14	DISABLE	-	-	-
15	DISABLE	-	-	-

```

+++ IP initialization complete +++

--- UDP10GRxIP menu ---
[0] : Display UDP10GRxIP parameters
[1] : Set UDP10GRxIP parameters
[2] : Run Receive Data Test

```

Figure 2-7 Input parameter setting and display main menu

3 Revision History

Revision	Date	Description
1.0	23-Jun-20	Initial version release
1.1	23-Nov-21	Add KCU116 board and 16-session demo