



HCTL-IP RAID0x8 Demo Instruction

1	Environment Requirement.....	2
2	Demo setup.....	4
3	Test Menu.....	8
3.1	Identify Device	8
3.2	Write Device	9
3.3	Read Device	12
3.4	Security Erase	15
4	Revision History	16

HCTL-IP RAID0x8 Demo Instruction

Rev1.1 6-Jul-23

This document describes the instruction to run 8-ch RAID0 SATA HCTL-IP on FPGA development board and AB09-FMCRAID board. The demo is designed to write/verify data with eight SATA-III devices. It is recommended to use same SATA device models to run the test. User controls test operation through NiosII command shell.

1 Environment Requirement

To run the demo on FPGA board, please prepare the following hardware/software.

- 1) IntelFPGA board: Arria10 SoC or Arria10 GX Development board
- 2) PC installing QuartusII programmer and NiosII command shell software
- 3) AB09-FMCRAID board, provided by Design Gateway
- 4) ATX power supply connecting to power connector on FMCRAID board for SATA device power
- 5) Eight SATA-III devices, inserting to CN0-CN7 of FMCRAID board
- 6) FPGA power adapter for FPGA board
- 7) Micro USB cable for programming FPGA and NiosII command shell, connecting between FPGA board and PC

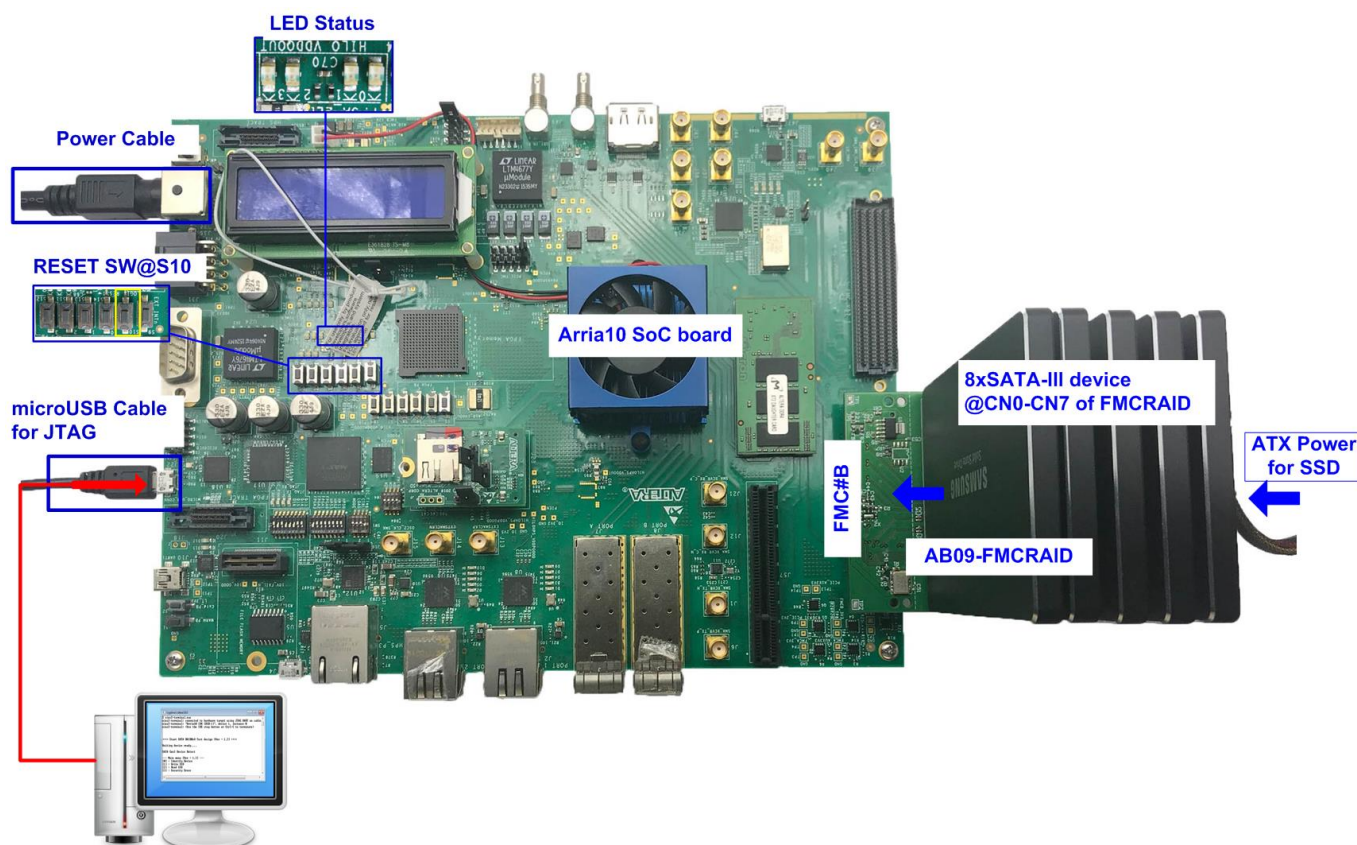


Figure 1-1 HCTL-IP RAID0 demo environment setup on Arria10 SoC board

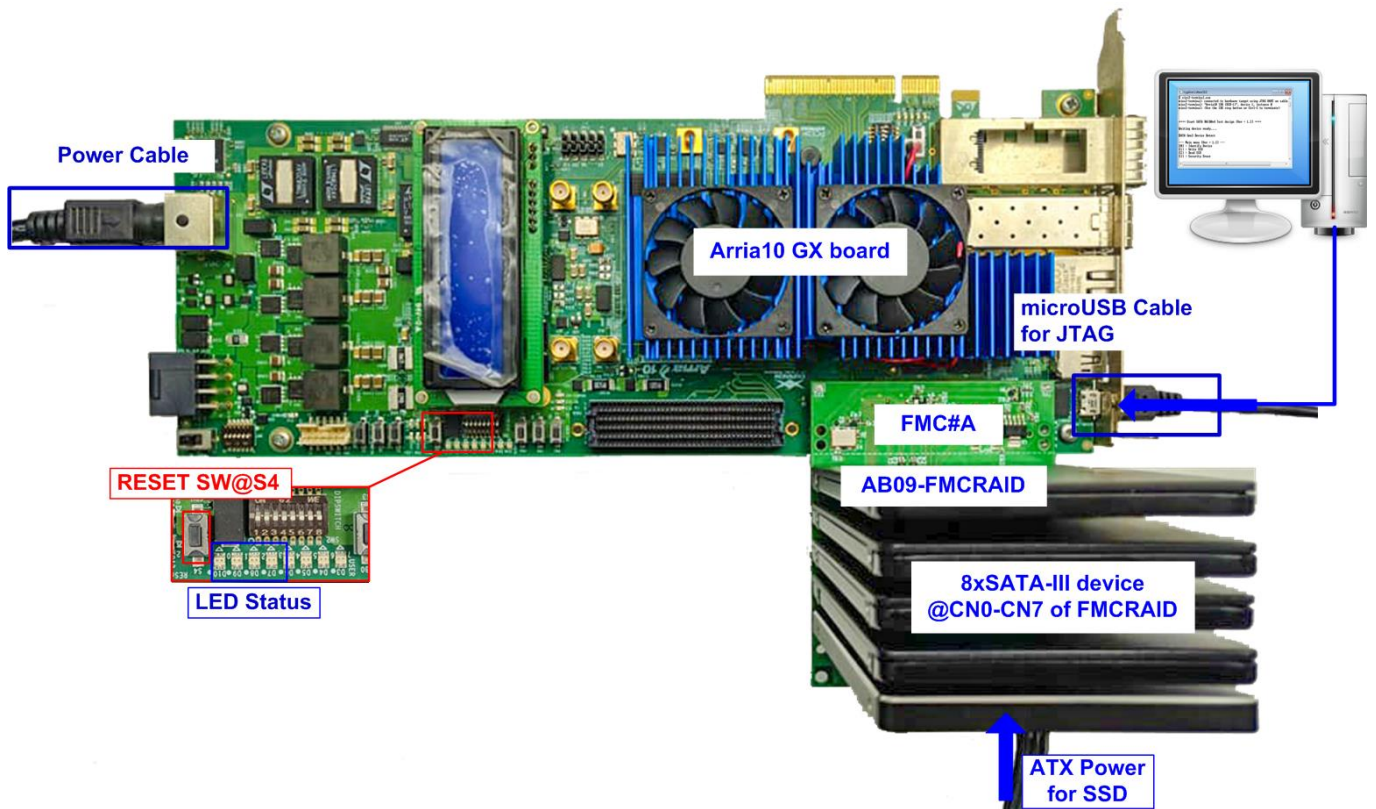


Figure 1-2 HCTL-IP RAID0 demo environment setup on Arria10 GX board

2 Demo setup

- 1) Power off system.
- 2) Connect AB09-FMCRAID as shown in Figure 2-1.
 - i. Connect AB09-FMCRAID to FMC#B for Arria10 SoC board or FMC#A for Arria10 GX board.
 - ii. Connect eight SATA-III devices to CN0-CN7 on AB09-FMCRAID board.
 - iii. Connect ATX power to power connector on AB09.

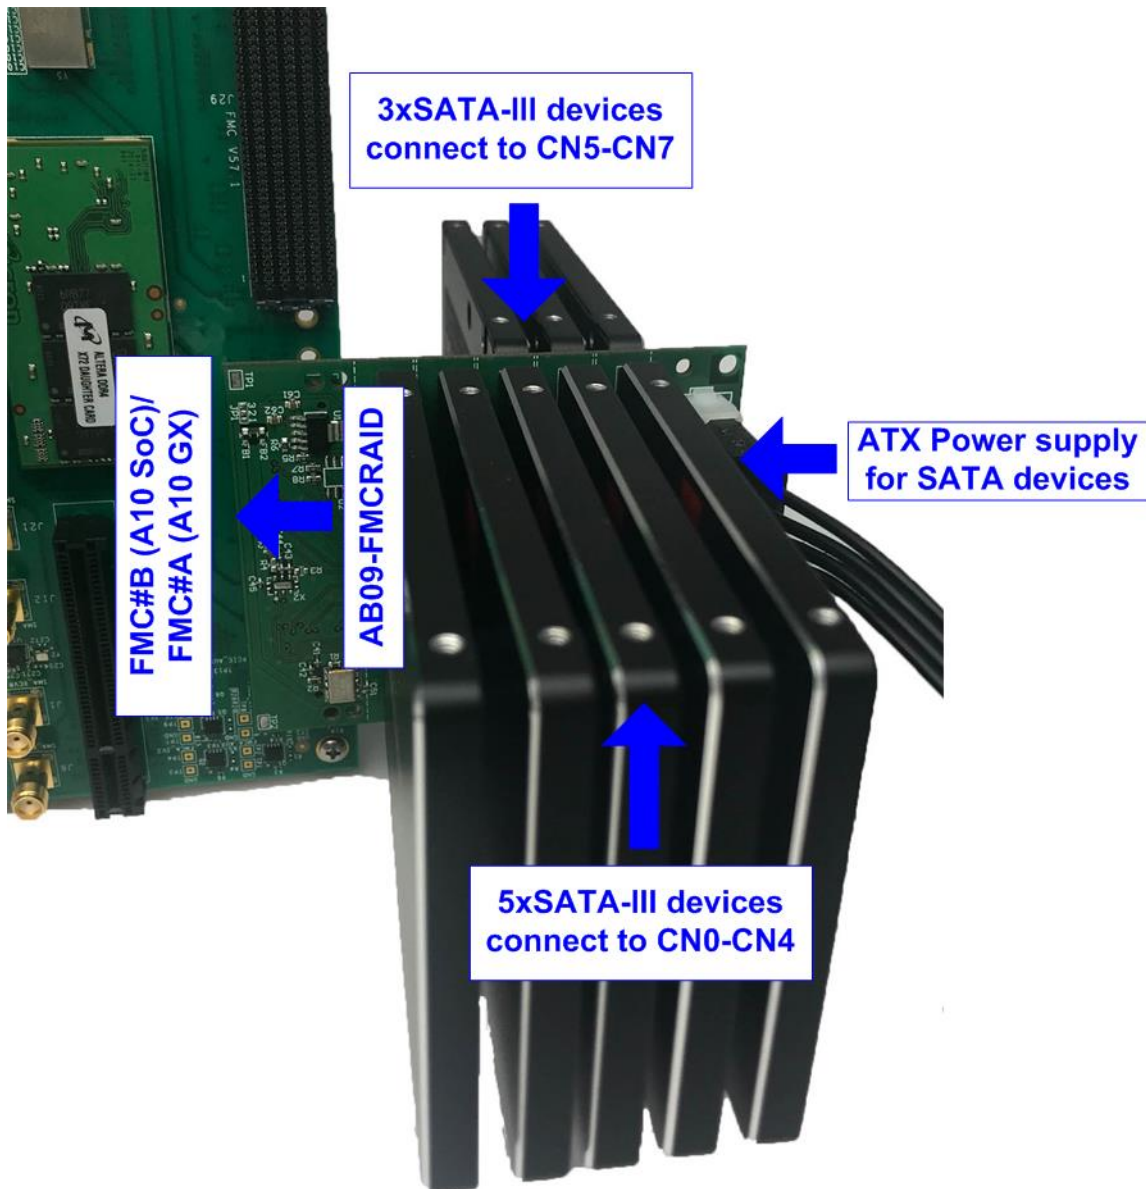


Figure 2-1 AB09 connection to FPGA board

- 3) Connect micro USB cable from FPGA board to PC for JTAG programming and JTAG UART.



Figure 2-2 USB cable for JTAG connection

- 4) Power on FPGA development board and ATX power supply for SATA device.
- 5) Use QuartusII Programmer to program "HSATARaid0x8.sof" file, as shown in Figure 2-3.

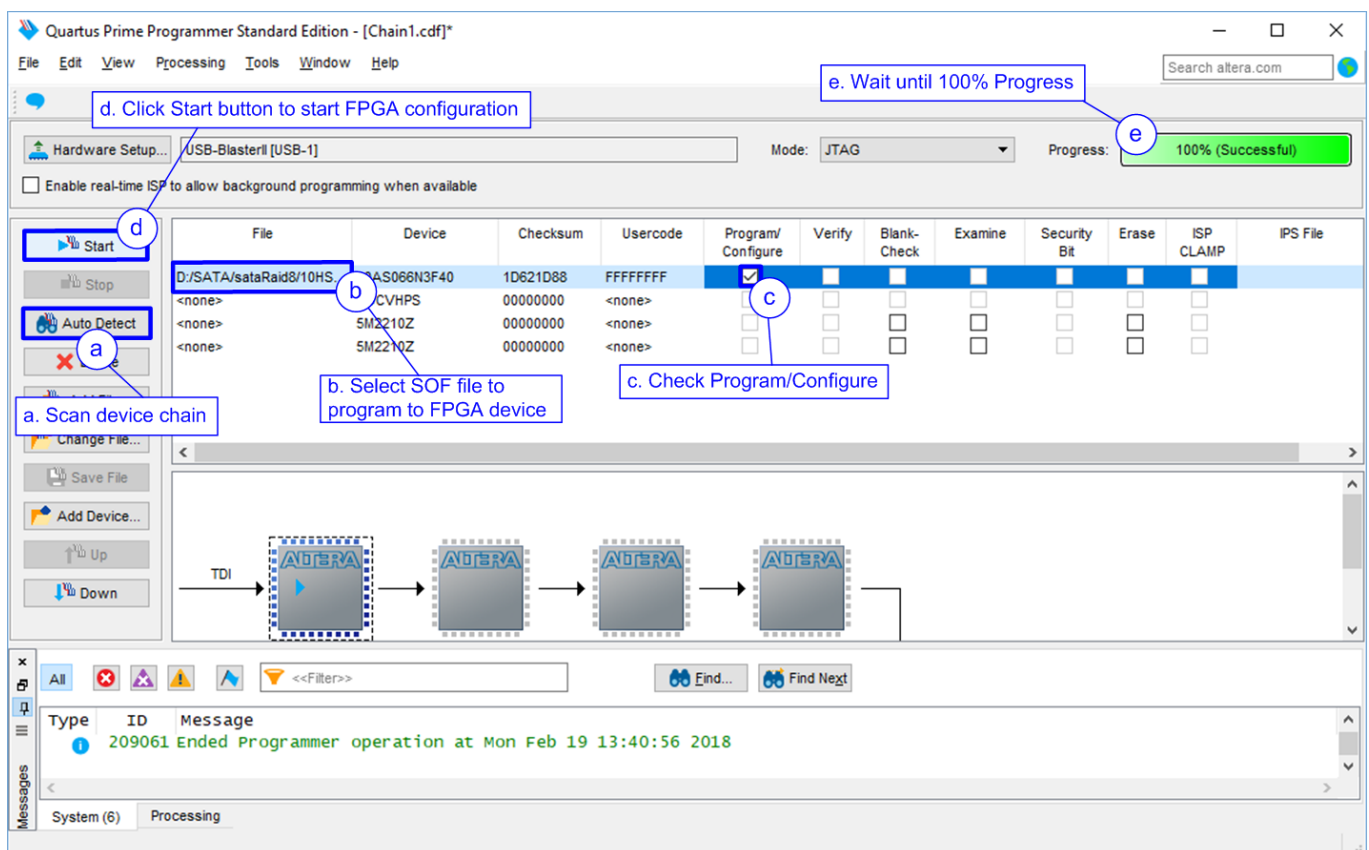


Figure 2-3 Programmed by QuartusII Programmer

- 6) Open NiosII Command Shell and run nios2-terminal command. After that, boot message is displayed.
 - “Waiting device ready” message is displayed during system initialization.
 - “SATA Gen3 Device Detect” shows SATA speed after complete RAID0 initialization.
 - Main menu is displayed to receive command from user.

```

/cygdrive/c/altera/16.0
$ nios2-terminal
nios2-terminal: connected to hardware target using JT
nios2-terminal: "USB-BlasterII [USB-1]", device 1, instance 0
nios2-terminal: (Use the IDE stop button or Ctrl-C to terminate)

++++ Start SATA RAID0x8 Test design [Ver = 1.0] +++++
Waiting device ready....
SATA Gen3 Device Detect
----- Main menu [Ver = 1.0] -----
[0] : Identify Device
[1] : Write Device
[2] : Read Device
[3] : Security Erase
  
```

Run nios2-terminal (Green box)

Green: User input
Blue: Output to user (Green and Blue boxes)

Wait SATA Linkup (Blue box)

SATA Speed = Gen3 (Blue box)

Main menu to select operating command (Blue box)

Figure 2-4 NiosII Terminal after boot up

- 7) If some SATA devices are not detected, “CH[X] Not Detect” will be displayed as shown in Figure 2-5. X is referred to SATA channel number which has found the error. Please check SATA device in the error channel.

```

/cygdrive/c/altera/16.0

++++ Start SATA RAID0x8 Test design [Ver = 1.0] +++++
Waiting device ready....
CH[6] Not Detect
CH[6] Not Detect
CH[6] Not Detect
CH[6] Not Detect
CH[6] Not Detect
CH[6] Not Detect
CH[6] Not Detect
  
```

SATA@CN6 is not found (Red box)

Figure 2-5 Error message when some devices are not detected

8) Check LED status on FPGA board. The description of LED is shown in Table 2-1.

Table 2-1 LED Definition

GPIO LED	ON	OFF
0	Normal operation	System is in reset condition
1	System is busy	Idle status
2	Error detect	Normal operation
3	Data verification fail	Normal operation

9) After programming completely, LED[0] and LED[1] are ON during RAID0 initialization process. LED[1] changes to OFF after RAID0 finishes initialization process. Now the system is ready to receive new command from user.

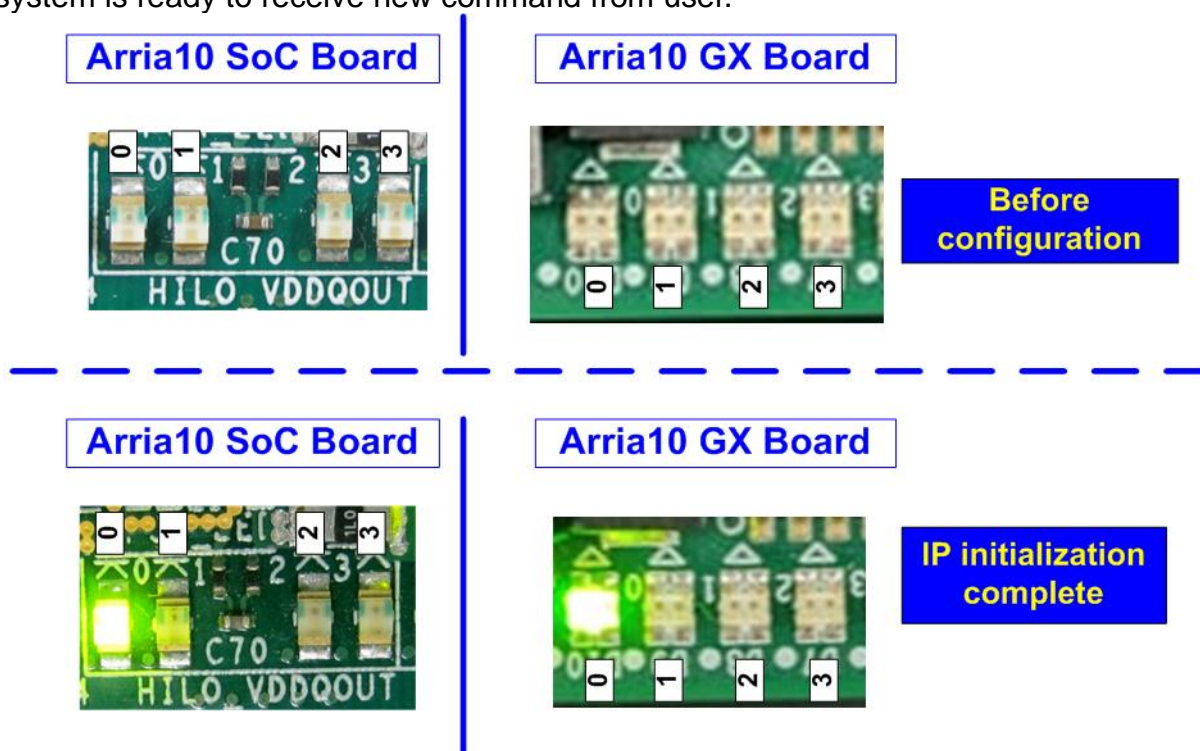


Figure 2-6 LED status

3 Test Menu

3.1 Identify Device

Select '0' to send Identify device command to RAID0.

```

/cygdrive/c/altera/16.0
0 Input '0' to run Identify Device command

+++ Identify Device selected +++
Model Number 0: Samsung SSD 850 PRO 1TB
Security feature set is supported
Normal Erase Mode Time=2 minutes
Model Number 1: Samsung SSD 850 PRO 1TB
Security feature set is supported
Normal Erase Mode Time=2 minutes
Model Number 2: Samsung SSD 850 PRO 1TB
Security feature set is supported
Normal Erase Mode Time=2 minutes
Model Number 3: Samsung SSD 850 PRO 1TB
Security feature set is supported
Normal Erase Mode Time=2 minutes
Model Number 4: Samsung SSD 850 PRO 1TB
Security feature set is supported
Normal Erase Mode Time=2 minutes
Model Number 5: Samsung SSD 850 PRO 1TB
Security feature set is supported
Normal Erase Mode Time=2 minutes
Model Number 6: Samsung SSD 850 PRO 1TB
Security feature set is supported
Normal Erase Mode Time=2 minutes
Model Number 7: Samsung SSD 850 PRO 1TB
Security feature set is supported
Normal Erase Mode Time=2 minutes
RAID Capacity= 8193[GB]

--- Main menu [Ver = 1.0] ---
[0] : Identify Device
[1] : Write Device
[2] : Read Device
[3] : Security Erase

```

Green: User input
Blue: Output to user

Model name, Security feature set, and RAID capacity (Output from Identify device command)

Figure 3-1 Test result when running Identify device menu

When the operation is completed, the device information is displayed on NiosII command shell. The console shows four values.

- 1) SSD model number: This value is decoded from Identify device data.
- 2) Security feature: This value is decoded from Identify device data to check that the device supports to run menu 3 (Security erase command) or not.
- 3) Normal Erase Mode Time: This value is decoded from Identify device data to check the estimation time to complete Security erase command. The minimum value is 2 minutes. This information is displayed when the device supports Security feature set.
- 4) SSD capacity: This value is signal output from RAID0 block. The value is equal to eight times of SATA CH#0 capacity.

3.2 Write Device

Select '1' to send Write command to RAID0.

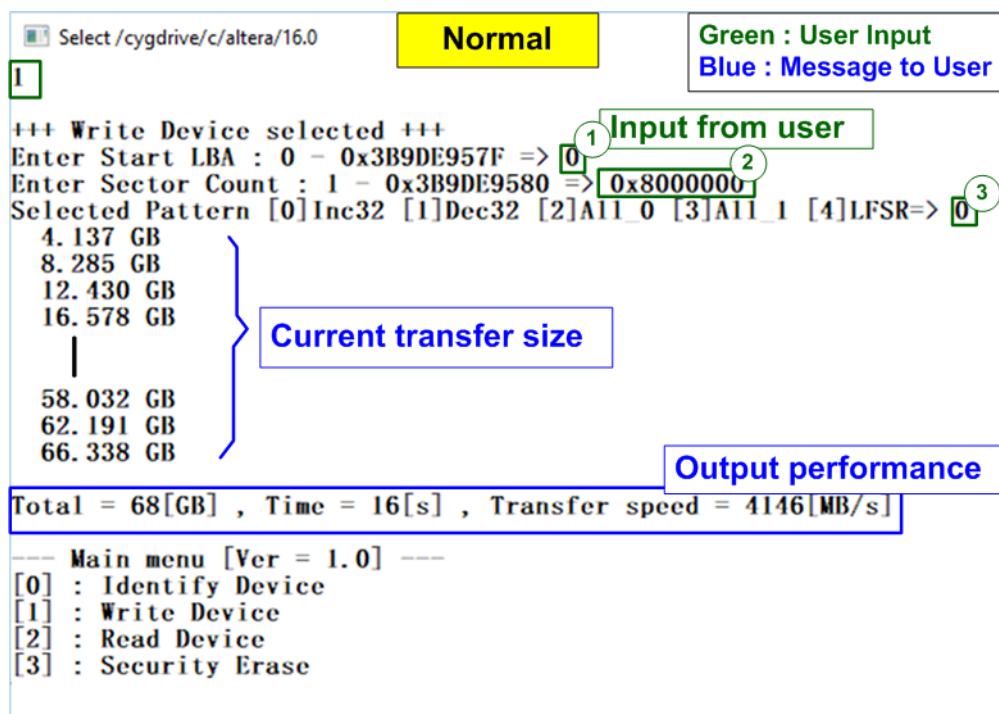


Figure 3-2 Test result when running Write command

Three inputs are required for this menu.

- 1) Start LBA: Input start address to write RAID0 as 512 byte unit. The input is decimal unit when input only digit number. User can add "0x" to be prefix when input is hexadecimal unit.
- 2) Sector Count: Input total transfer size as 512 byte unit. The input is decimal unit when input only digit number. User can add "0x" to be prefix when input is hexadecimal unit.
- 3) Test pattern: Select test data pattern for writing to RAID0. Five patterns can be selected, i.e. 32-bit increment, 32-bit decrement, all 0, all 1, and 32-bit LFSR counter.

If all inputs are valid, the operation will be started. During writing data, current transfer size is displayed on the console every second to show that system is still alive. Finally, total size, total time usage, and test speed are displayed on the console as test result.

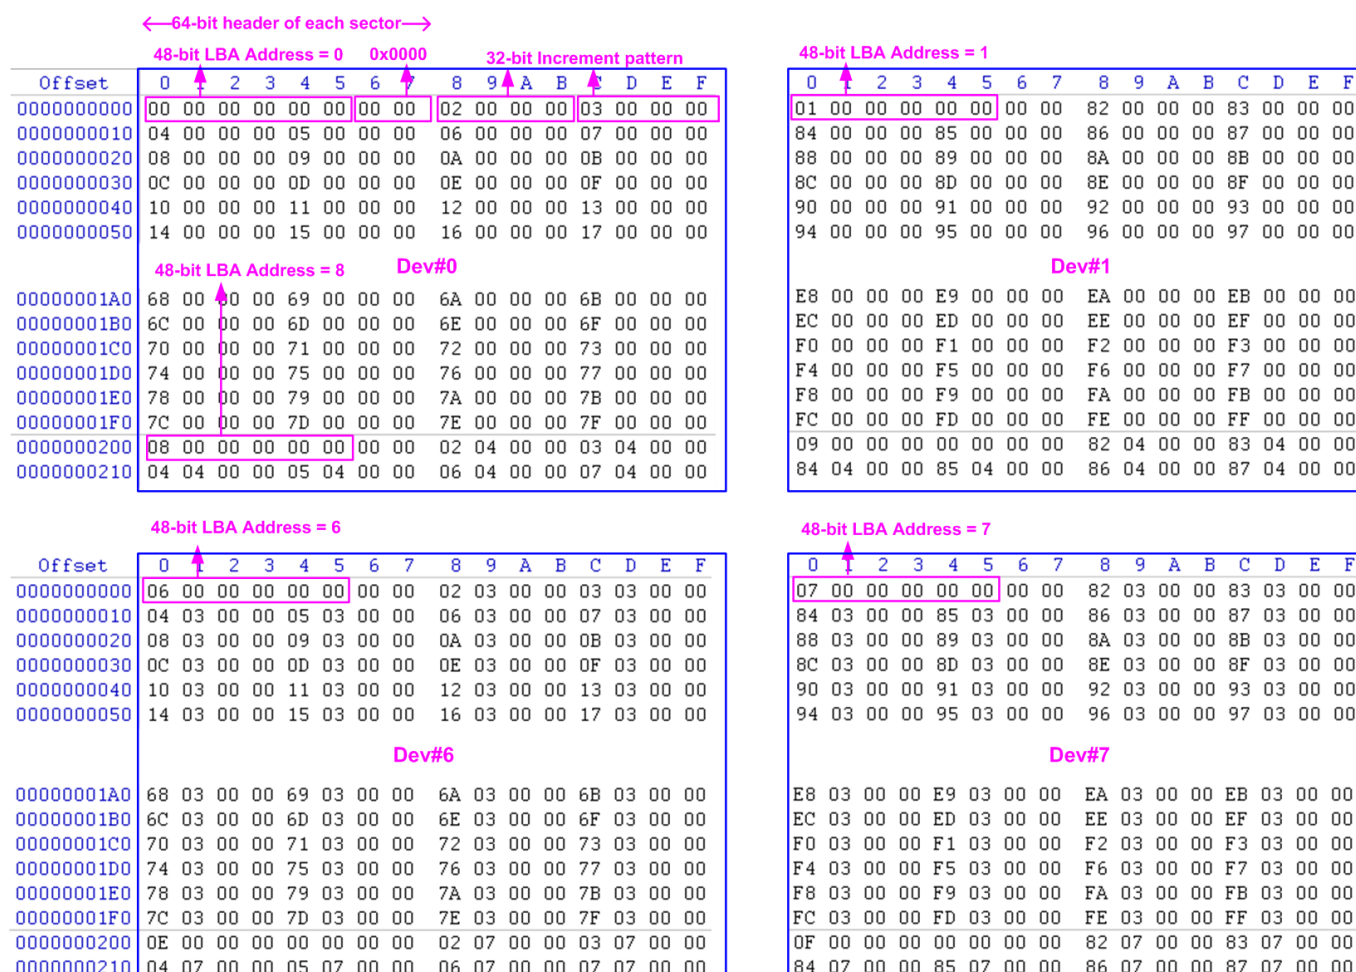


Figure 3-3 Example Test data in sector#0/#1 of devices by increment pattern

Test data is split into 512 byte unit. Each 512 byte data has unique 64 bit header which consists of 48 bit address (in 512 byte unit) and 16 bit zero value. The data after 64 bit header is the test pattern which is selected by the user.

Figure 3-3 shows the example when using 32 bit increment pattern. The stripe size of RAID0 demo is 512 byte. So, the data is switched to the next device when finishing each 512 byte data. The test data sequence is arranged from Disk#0, #1, ..., #7, and then skips to the next 512 byte address of Disk#0, #1, ... #7, and so on. The header shows the address of test data in 512 byte unit. To calculate the disk number from the test data address, the following equation can be applied.

$$\text{Device number} = \langle \text{Test data address in 512 byte unit} \rangle \bmod 8.$$

Dev#0 stores test data address = 0, 8, 16, ...

Dev#1 stores test data address = 1, 9, 17, ...

...

Dev#7 stores test data address = 7, 15, 23, ...

The test data address could be checked from 48 bit address in the header of each 512 byte unit data in the device.

Figure 3-4 shows the example when the input is less than or more than the recommended range for each parameter. The console displays “Invalid input” and then the operation is cancelled.


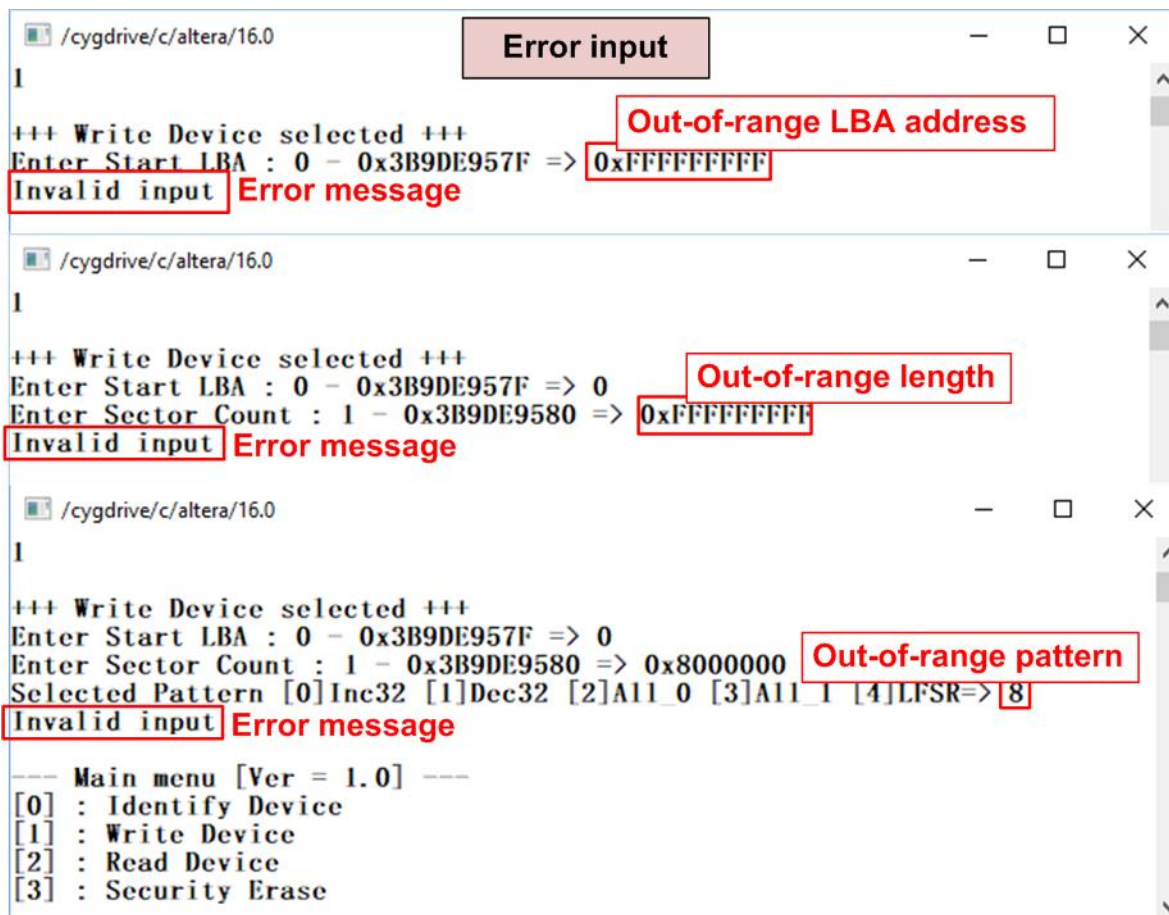


Figure 3-4 Error message when the input is invalid

3.3 Read Device

Select '2' to send Read command to RAID0.

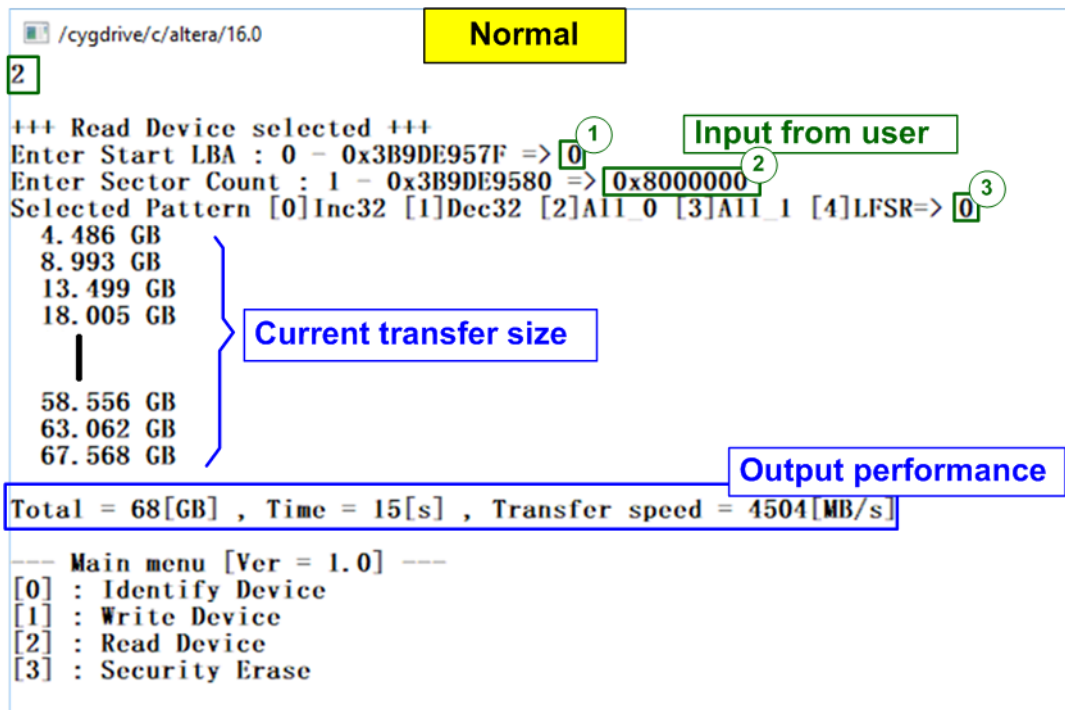

```

/cygdrive/c/altera/16.0
Normal
2
+++ Read Device selected +++
Enter Start LBA : 0 - 0x3B9DE957F => 0
Enter Sector Count : 1 - 0x3B9DE9580 => 0x8000000
Selected Pattern [0]Inc32 [1]Dec32 [2>All_0 [3>All_1 [4]LFSR=> 0
4.486 GB
8.993 GB
13.499 GB
18.005 GB
58.556 GB
63.062 GB
67.568 GB
Total = 68[GB] , Time = 15[s] , Transfer speed = 4504[MB/s]
--- Main menu [Ver = 1.0] ---
[0] : Identify Device
[1] : Write Device
[2] : Read Device
[3] : Security Erase

```

Figure 3-5 Test result when running Read command

Three inputs are required for this menu.

- 1) Start LBA: Input start address to read RAID0 as 512 byte unit. The input is decimal unit when input only digit number. User can add "0x" to be prefix when input is hexadecimal unit.
- 2) Sector Count: Input total transfer size as 512 byte unit. The input is decimal unit when input only digit number. User can add "0x" to be prefix when input is hexadecimal unit.
- 3) Test pattern: Select test data pattern to verify data from RAID0. Test pattern must be matched with the test pattern using in Write device menu. Five types can be selected, i.e. 32-bit increment, 32-bit decrement, all 0, all 1, and 32-bit LFSR counter.

Similar to Write device menu, the test system will read data from RAID0 when all inputs are valid. During reading data, current transfer size is displayed on the console every second to show that system is still alive. Total size, total time usage, and test speed are displayed after end of transfer.

Figure 3-6 and Figure 3-7 show the example of error message when data verification is failed. “Verify fail” is displayed with the information of the 1st failure data, i.e. the error byte address, the expected data, and the read data. User presses any key to cancel read operation or wait until the read process is completed.

If the user waits until the read command completes, the output performance from the read process will be displayed. The user can continue to run the system test if the error is caused from the wrong test pattern input.

If the user cancels the read operation, the command will not complete in the good sequence. It is recommended to power off/on all SATA devices and press “RESET” button to restart the system.

```

/cygdrive/c/altera/16.0
2
+++ Read Device selected +++
Enter Start LBA : 0 - 0x3B9DE957F => 0
Enter Sector Count : 1 - 0x3B9DE9580 => 0x8000000
Selected Pattern [0]Inc32 [1]Dec32 [2]All_0 [3]All_1 [4]LFSR=> 4
Verify fail
1st Error at Byte Addr = 0x00000000
Expect Data[255-128] = 0x0007FFFF FFF80004 0003FFFF FFFC0002
Expect Data[127- 0] = 0x0001FFFF FFFE0001 00000000 00000000
Read Data [255-128] = 0x00000007 00000006 00000005 00000004
Read Data [127- 0] = 0x00000003 00000002 00000000 00000000
Press any key to cancel operation
4.496 GB
9.002 GB
13.508 GB
18.014 GB
|
58.565 GB
63.069 GB
67.575 GB
Total = 68[GB] , Time = 15[s] , Transfer speed = 4505[MB/s]
---- Main menu [Ver = 1.0] ----
[0] : Identify Device
[1] : Write Device
[2] : Read Device
[3] : Security Erase

```

Verification error without cancellation

Wrong pattern

Verify fail
 1st Error at Byte Addr = 0x00000000
 Expect Data[255-128] = 0x0007FFFF FFF80004 0003FFFF FFFC0002
 Expect Data[127- 0] = 0x0001FFFF FFFE0001 00000000 00000000
 Read Data [255-128] = 0x00000007 00000006 00000005 00000004
 Read Data [127- 0] = 0x00000003 00000002 00000000 00000000
 Press any key to cancel operation

Message when verification is failed

Output performance

Total = 68[GB] , Time = 15[s] , Transfer speed = 4505[MB/s]

Figure 3-6 Data verification is failed and wait until read complete

```

Select /cygdrive/c/altera
2
+++ Read Device selected +++
Enter Start LBA : 0 - 0x3B9DE957F => 0
Enter Sector Count : 1 - 0x3B9DE9580 => 0x8000000
Selected Pattern [0]Inc32 [1]Dec32 [2]All_0 [3]All_1 [4]IFSR=> 4
Verify fail
1st Error at Byte Addr = 0x00000000
Expect Data[255-128] = 0x0007FFFF FFF80004 0003FFFF FFFC0002
Expect Data[127- 0] = 0x0001FFFF FFFE0001 00000000 00000000
Read Data [255-128] = 0x00000007 00000006 00000005 00000004
Read Data [127- 0] = 0x00000003 00000002 00000000 00000000
Press any key to cancel operation
4.494 GB
Operation is cancelled
Please reset system before start new test
--- Main menu [Ver = 1.0] ---
[0] : Identify Device
[1] : Write Device
[2] : Read Device
[3] : Security Erase
  
```

Verification error with cancellation

Message when verification is failed

User presses some keys to cancel the operation

Message when the operation is cancelled

Figure 3-7 Data verification is failed and press key to cancel operation

3.4 Security Erase

Select '3' to send Security Erase command to RAID0. Please confirm that all SATA devices support Security Erase feature by using Identify device menu. The estimated time of security erase operation is also displayed in Identify device menu.

After selecting the menu, confirmation message is displayed on NiosII command shell. User input 'y' or 'Y' to continue security erase operation or input other keys to cancel operation.

Number 0-9 is displayed NiosII command shell every second to show that system still run. After complete the operation, total time usage is displayed as a test result.

Figure 3-9 shows the example when user inputs other keys to cancel the command.

```

Select /cygdrive/c/altera/16.0
3
+++ Security Erase selected +++
Security Erase will erase all contents on the Device
It may use long time for this operation
Press 'y' to confirm : Y
0 1 2 3 4
Security Erase complete
Time = 5819[ms]
--- Main menu [Ver = 1.0] ---
[0] : Identify Device
[1] : Write Device
[2] : Read Device
[3] : Security Erase
  
```

Figure 3-8 Test result when running Security Erase command

```

Select /cygdrive/c/altera/16.0
3
+++ Security Erase selected +++
Security Erase will erase all contents on the Device
It may use long time for this operation
Press 'y' to confirm : N
--- Main menu [Ver = 1.0] ---
[0] : Identify Device
[1] : Write Device
[2] : Read Device
[3] : Security Erase
  
```

Figure 3-9 Cancel Security Erase command

4 Revision History

Revision	Date	Description
1.0	9-Mar-18	Initial version release
1.1	15-May-19	Support Arria10 GX board