



2-Ch RAID0 (NVMe-IP) Demo Instruction

1	Overview	2
2	Test Menu.....	3
2.1	Identify Command.....	3
2.2	Write Command.....	4
2.3	Read Command.....	6
2.4	SMART Command.....	8
2.5	Flush Command	9
2.6	Shutdown Command	9
3	Revision History	10

2-Ch RAID0 (NVMe-IP) Demo Instruction

Rev2.1 29-Jun-23

1 Overview

This document describes the instruction to run NVMe-IP 2-ch RAID0 demo on FPGA development board for accessing two NVMe SSDs as RAID0. The demo is designed to run Identify, Write, Read, SMART, Flush, and Shutdown command. User controls test operation via FPGA console.

After user finishes FPGA board setup following “dg_nvmeip_raid0x2_fpgasetup” document, main menu is displayed. The user can set the input to the console for selecting test operation.

```

+++ NVMmeIP RAID0x2 Test design [IPVer = 4.3] +++
Waiting PCIe Linkup
Waiting IP initialization
Ch[0]PCIe Gen3 x4 Device Detect
Ch[1]PCIe Gen3 x4 Device Detect
--- NVMmeIP menu ---
[0] : Identify Command
[1] : Write Command
[2] : Read Command
[3] : SMART Command
[4] : Flush Command
[5] : Shutdown Command
  
```

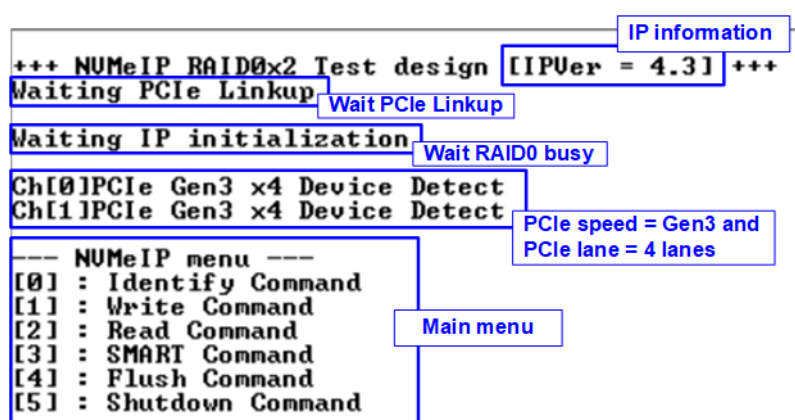


Figure 1-1 NVMe IP 2-ch RAID0 demo main menu

2 Test Menu

2.1 Identify Command

Select '0' to send Identify command to RAID0.

```

+++ Identify Command selected +++
Ch[0]Model Number : Samsung SSD 970 PRO 512GB
Ch[1]Model Number : Samsung SSD 970 PRO 512GB
RAID Capacity= 1024[GB]
--- NUMeIP menu ---
[0] : Identify Command
[1] : Write Command
[2] : Read Command
[3] : SMART Command
[4] : Flush Command
[5] : Shutdown Command
  
```

Model name and RAID0 capacity

Figure 2-1 Test result when running Identify command

After finishing the operation, the SSD information output from Identify command is displayed. The console shows two values.

- 1) SSD model number: This value is decoded from Identify controller data of each SSD.
- 2) RAID capacity: This value is calculated by multiplying device capacity in channel#0 by 2. Therefore, it is recommended to connect two SSDs which have the same size.

When unsupported LBA size SSD is detected, the error message is displayed on the console as shown in Figure 2-2

Note: In RAID0 design, LBA size of SSD must be equal to 512-byte. Other size can be supported by modifying RAID0 controller hardware.

```

Not supported LBA size is detected
Warning : LBA Size Not Support!
Please Check Devices
  
```

Figure 2-2 Error message when LBA does not support

2.2 Write Command

Select '1' to send Write command to RAID0.

```

+++ Write Command selected +++
Enter Start Address (512 Byte)      : 0 - 0x773C255F => 0
Enter Length (512 Byte)            : 1 - 0x773C2560 => 0x80000000
Selected Pattern [0]Inc32 [1]Dec32 [2]All_0 [3]All_1 [4]LFSR=> 4
4.707 [GB]
9.379 [GB]
14.065 [GB]
56.178 [GB]
60.867 [GB]
65.531 [GB]
Total = 68.719 [GB] , Time = 14678[ms] , Transfer speed = 4681[MB/s]
--- NUMeIP menu ---
[0] : Identify Command
[1] : Write Command
[2] : Read Command
[3] : SMART Command
[4] : Flush Command
[5] : Shutdown Command
  
```

◆ : User input
◆ : User output

1: Start Address input (0)

2: Length input (0x80000000)

3: Pattern input (4)

Input test parameter

Current transfer size

Output performance

Figure 2-3 Test result when running Write command

User inputs three parameters as follows.

- 1) Start Address: Start address to write RAID0 in 512-byte unit. The input is decimal unit when the input is only digit number. User can add "0x" to be a prefix for hexadecimal unit.
- 2) Transfer Length: Total transfer size in 512-byte unit. The input is decimal unit when the input is only digit number. User can add "0x" to be a prefix for hexadecimal unit.
- 3) Test pattern: Select test data pattern for writing RAID0. There are five patterns, i.e., 32-bit incremental, 32-bit decremental, all-0, all-1, and 32-bit LFSR counter.

When all inputs are valid, the operation begins. During writing data, current transfer size is displayed on the console every second to show that system is still alive. Finally, total size, total time usage, and test speed are displayed on the console as a test result.

2.3 Read Command

Select '2' to send Read command to RAID0.

```

+++ Read Command selected +++
Enter Start Address (512 Byte)      : 0 - 0x773C255F => 0
Enter Length (512 Byte)           : 1 - 0x773C2560 => 0x80000000
Selected Pattern [0]Inc32 [1]Dec32 [2]All_0 [3]All_1 [4]LFSR=> 4
6.760 [GB]
13.525 [GB]
20.290 [GB]
54.111 [GB]
60.874 [GB]
67.638 [GB]
Total = 68.719 [GB] , Time = 10159[ms] , Transfer speed = 6763[MB/s]
--- NUMeIP menu ---
[0] : Identify Command
[1] : Write Command
[2] : Read Command
[3] : SMART Command
[4] : Flush Command
[5] : Shutdown Command
  
```

Figure 2-6 Input and result of Read Command menu

User inputs three parameters as follows.

- 1) Start Address: Start address to read SSD as 512-byte unit. The input is decimal unit when the input is only digit number. User can add "0x" to be a prefix for hexadecimal unit.
- 2) Transfer Length: Total transfer size as 512-byte unit. The input is decimal unit when the input is only digit number. User can add "0x" to be a prefix for hexadecimal unit
- 3) Test pattern: Select test data pattern to verify data from RAID0. Test pattern must be matched with the pattern using in Write Command menu. There are five patterns, i.e., 32-bit incremental, 32-bit decremental, all-0, all-1, and 32-bit LFSR counter

Similar to Write command menu, test system starts reading data from RAID0 when all inputs are valid. During reading data, current transfer size is displayed on the console every second to show that system is still alive. Total size, total time usage, and test speed are calculated and displayed after finishing data transferring.

Figure 2-7 shows error message when data verification is failed. “Verify fail” is displayed with the information of the 1st failure data, i.e., the error byte address, the expected value, and the read value. User can press any key(s) to cancel read operation or wait until finishing Read command. Without cancelling the operation, the read operation runs until finishing and then displaying the performance on the console as a test result.

When cancelling the operation, the read command still runs as the background process. So, the operation does not complete in the good sequence. It is recommended to power-off/on AB18/AB16 and then presses “RESET” button to restart system.

Verification error without cancellation

```

+++ Read Command selected +++
Enter Start Address (512 Byte)      : 0 - 0x773C255F => 0
Enter Length (512 Byte)            : 1 - 0x773C2560 => 0x80000000
Selected Pattern [0]Inc32 [1]Dec32 [2]All_0 [3]All_1 [4]LFSR=> 1
Verify fail
1st Error at Byte Addr = 0x00000000
Expect Data[255:128]   = 0xFFFFFFFF8_FFFFFFFF9_FFFFFFFFA_FFFFFFFFB
Expect Data[127:0]    = 0xFFFFFFFFC_FFFFFFFFD_00000000_00000000
Read Data[255:128]    = 0x0007FFFF_FFF80004_0003FFFF_FFFC0002
Read Data[127:0]     = 0x0001FFFF_FFFE0001_00000000_00000000
Press any key to cancel operation
6.760 [GB]
13.526 [GB]
20.290 [GB]

54.115 [GB]
60.880 [GB]
67.646 [GB]

Total = 68.719 [GB] , Time = 10158[ms] , Transfer speed = 6764[MB/s]

--- NUMeIP menu ---
[0] : Identify Command
[1] : Write Command
[2] : Read Command
[3] : SMART Command
[4] : Flush Command
[5] : Shutdown Command
    
```

Wrong pattern

Message when verification is failed

Output performance

Total = 68.719 [GB] , Time = 10158[ms] , Transfer speed = 6764[MB/s]

Verification error with cancellation

```

+++ Read Command selected +++
Enter Start Address (512 Byte)      : 0 - 0x773C255F => 0
Enter Length (512 Byte)            : 1 - 0x773C2560 => 0x80000000
Selected Pattern [0]Inc32 [1]Dec32 [2]All_0 [3]All_1 [4]LFSR=> 1
Verify fail
1st Error at Byte Addr = 0x00000000
Expect Data[255:128]   = 0xFFFFFFFF8_FFFFFFFF9_FFFFFFFFA_FFFFFFFFB
Expect Data[127:0]    = 0xFFFFFFFFC_FFFFFFFFD_00000000_00000000
Read Data[255:128]    = 0x0007FFFF_FFF80004_0003FFFF_FFFC0002
Read Data[127:0]     = 0x0001FFFF_FFFE0001_00000000_00000000
Press any key to cancel operation
6.762 [GB]
Operation is cancelled
Please reset system before starting a new test

--- NUMeIP menu ---
[0] : Identify Command
[1] : Write Command
[2] : Read Command
[3] : SMART Command
[4] : Flush Command
[5] : Shutdown Command
    
```

User enters some keys to cancel the operation

Message when operation is cancelled

Figure 2-7 Data verification is failed

2.4 SMART Command

Select '3' to send SMART command to RAID0.

```

+++ SMART Command selected +++
++ ch[0]
<< Health Status >>
Remaining Life : 97%

<< SMART Log Information >>
Percentage Used : 3%
Temperature : 28 Degree Celsius
Total Data Read : 41886 GB
Total Data Read <Raw data> : 0x00000000_00000000_00000000_04E03866
Total Data Written : 52321 GB
Total Data Written <Raw data> : 0x00000000_00000000_00000000_0617306C
Power On Cycles : 1431 Times
Power On Hours : 104 Hours
Unsafe Shutdowns : 742 Times

++ ch[1]
<< Health Status >>
Remaining Life : 98%

<< SMART Log Information >>
Percentage Used : 2%
Temperature : 28 Degree Celsius
Total Data Read : 45640 GB
Total Data Read <Raw data> : 0x00000000_00000000_00000000_05501CDD
Total Data Written : 47900 GB
Total Data Written <Raw data> : 0x00000000_00000000_00000000_0593732A
Power On Cycles : 1145 Times
Power On Hours : 144 Hours
Unsafe Shutdowns : 580 Times

SMART Command Complete
--- NUMeIP menu ---

```

Data output decoded from SMART command (SSD Channel#0)

Data output decoded from SMART command (SSD Channel#1)

Figure 2-8 Test result when running SMART command

After finishing the operation, SMART/Health Information (output from SMART command) of two SSDs are displayed, as shown in Figure 2-8. The console shows Health status and SMART log information. The Health status shows the remaining life of the SSD in percent unit which is calculated from Percentage Used in the SMART log information.

The SMART log information shows seven parameters as follow.

- 1) Percentage Used: Display SSD usage in percent unit.
- 2) Temperature in °C unit.
- 3) Total Data Read decoded as GB/TB unit. Additionally, raw data without decoding is displayed in 128-bit hexadecimal unit. The unit size of raw data is 512,000 bytes.
- 4) Total Data Written decoded as GB/TB unit. Additionally, raw data without decoding is displayed in 128-bit hexadecimal unit. The unit size of raw data is 512,000 bytes.
- 5) Power On Cycles: Display the number of power cycles.
- 6) Power On Hours: Display period of time in hours to show how long the SSD has been powered on.
- 7) Unsafe Shutdowns: Display the number of unsafe shutdowns of SSD

2.5 Flush Command

Select '4' to send Flush command to RAID0.

```

+++ Flush Command selected +++
Flush Command Complete
--- NUMeIP menu ---
[0] : Identify Command
[1] : Write Command
[2] : Read Command
[3] : SMART Command
[4] : Flush Command
[5] : Shutdown Command
  
```

Message after finishing the operation

Figure 2-9 Test result when running Flush command

“Flush Command Complete” is displayed after finishing Flush operation.

2.6 Shutdown Command

Select '5' to send Shutdown command to RAID0.

```

--- NUMeIP menu ---
[0] : Identify Command
[1] : Write Command
[2] : Read Command
[3] : SMART Command
[4] : Flush Command
[5] : Shutdown Command

+++ Shutdown Command selected +++
Are you sure you want to shutdown the device now ?
Press 'y' to confirm : y

Shutdown command is complete
The device has turned off...
  
```

Confirmation message

Press 'y' to confirm

Last message before NVMe-IP and SSD are inactive status

Figure 2-10 Test result when running in Shutdown command

The confirmation message is displayed on the console. User enters 'y' or 'Y' to continue the operation or enters other keys to cancel the operation.

After finishing Shutdown operation, “Shutdown command is complete” is displayed on the console as the last message. Main menu is not displayed anymore. User needs to power off/on the test system to start new test operation.

3 Revision History

Revision	Date	Description
1.0	9-Oct-17	Initial version release
2.0	26-Jun-20	Remove FPGA setup from the document
2.1	30-Mar-21	Update SMART log information